




Molypet

Automatic Pet Feeder User Manual

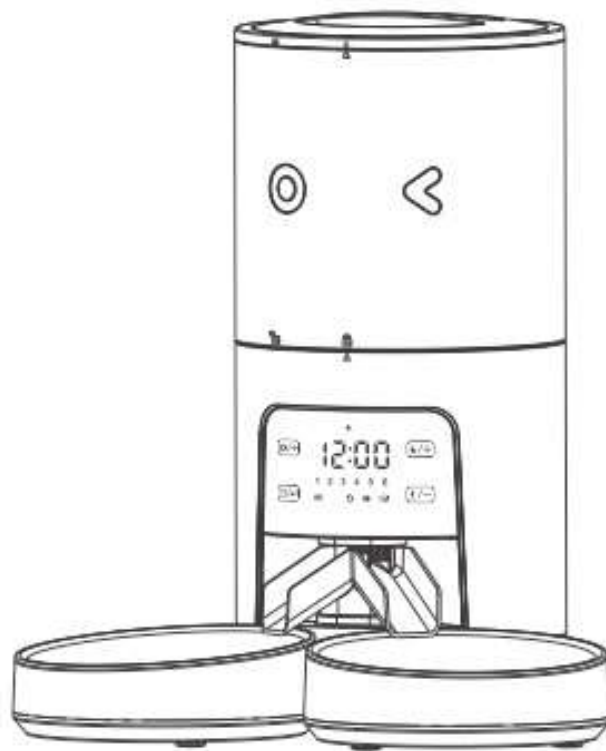

Model: F02D

Please read this manual carefully before using.


WARNING

- Dispose of all packaging materials properly. Some items may be packed in plastic bags; these bags could cause suffocation; keep away from children and pets.
- Do NOT allow small children to play with, in or around the pet feeder.
- To reduce the risk of injury, please keep close supervision when an appliance is used near children.
- Do NOT use the feeder with pets not able to reach the food tray or with any physical disability.
- Do NOT immerse the base part in water at any time as it may damage electronic components like the control panel.
- Do NOT place any foreign object in the pet feeder.
- Do NOT use outdoors. Check operation frequently to be sure the unit is dispensing properly.
- Do NOT use wet, canned or moist food.
- Do NOT disassemble the unit other than as instructed in this User Guide.
- Do NOT use the feeder for anything other than its intended use.
- Only use attachments recommended or sold by the manufacturer. The use of attachments not recommended or sold by the manufacturer may cause an unsafe condition. Do not modify the pet feeder.
- Do not operate any appliance if the unit is malfunctioning or has been damaged. Do not attempt repairs on the pet feeder yourself. Contact our customer service immediately for further instructions.
- Always unplug when not in use and before cleaning.
- Never pull on the electrical power cord to remove the plug from the wall outlet.
- If the plug of this device gets wet, turn on electricity to that wall outlet. Do not attempt to unplug.
- Examine the feeder after installation. Do not plug in if there is water on the power cord or plug.
- To avoid tripping, always position power cord out of the way of foot traffic.

CAUTION

- Do NOT allow pets to chew on or swallow any parts. If you are concerned about the power cord, purchase a cord conduit (a hard-plastic protector) at any hardware store to protect the power cord.
- Do NOT install or store the pet feeder where it will be exposed to weather or temperatures below 4°C/40°F.
- Use alkaline D batteries to power. Do NOT use rechargeable batteries.
- Check the batteries regularly. Before Leaving for extended time, always replace batteries with new ones.
- Do NOT lift the pet feeder by the lid, food tank, or food tray. Lift and carry it using both hands and the base, while keeping the unit in an upright position.
- Suitable for dry food ONLY, with kibble size ranging from 5-15mm/0.2-0.6in diameter. Larger kibble may get stuck at the food outlet.
- Do not put your fingers into the food outlet or let your fingers touch the rotor.

Product Overview

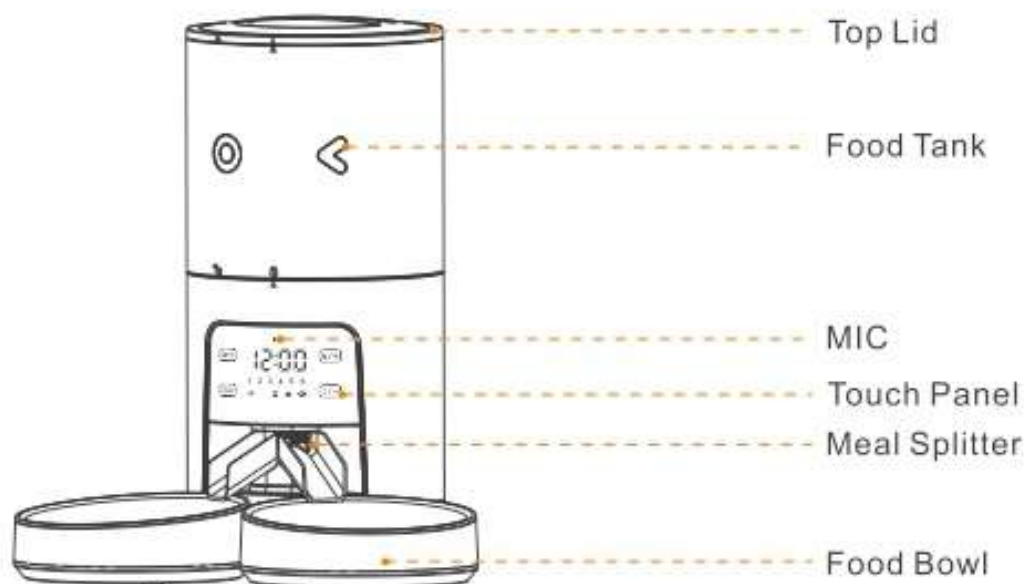

Product Specifications


Product Model	F02D
Input	DC5V
Dimensions	L196*W196*H450mm
Dual Power	Type-C/3 cell D Batteries
Capacity	6L
Programmable	1-50 portions; 1/10 cup per portion; 6 meals per day

Prepare for Setting


1. Dual Power Supply

F02D can be powered by external power or battery alone. Recommended using external power and battery power supply at the same time to ensure that the feeder works normally if power outage.

- 1) Plug the 5V power adapter into a power socket and the USB cable into the USB port on the back of the feeder. Check if the Power Switch on the bottom is on the "I" location.

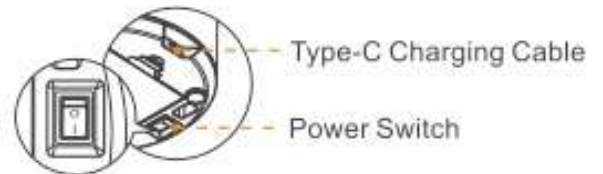


- 2) Remove the base, open the battery compartment at the bottom of the feeder. Install three alkaline D batteries (not included), make sure the batteries match the positive and negative poles with the markings in the compartment.

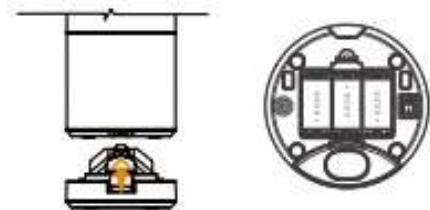

2. Install Food Bowl

- 1) Attach 2 food bowls to the notch underneath the feeder base.

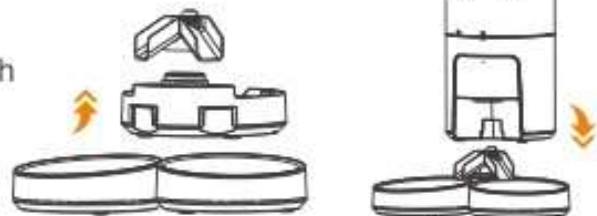

2) Rotate the meal splitter to adjust the amount of food.




Left=Right



Left<Right

3. Remove and Lock Lid

To snap into place, turn the lid clockwise from the right rotating sign to the left rotating sign.

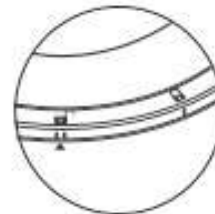


Remove Lid




Lock Lid

4. Fill in Food

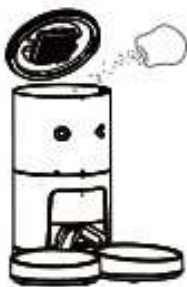 


 
 
 
Recommended kibble size: 5-15mm/0.2-0.6 inch in diameter.



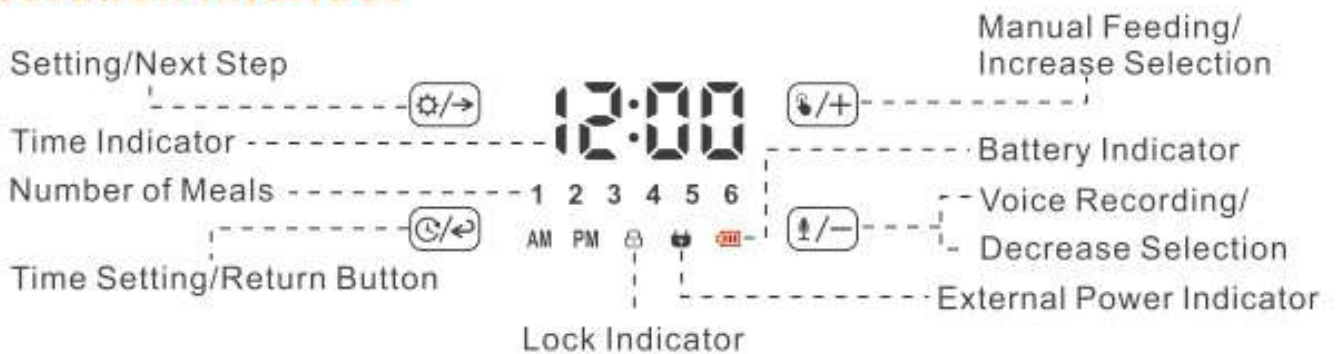


Operation Interface

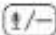

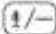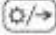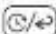Button Quick Guide




Button	Description	Operating Mode Function
	Setting	Unlock status: Long press 2s to set feeding parameters, long press exit setting mode.
	Next Step	Short press to next step.
	Time Setting	Unlock status: Long press 2s to set current time, long press exit setting mode. Short press to set hour and minute.
	Return	Setting mode: Short press to return to previous step.
	Recording	Standby: Short press--Play recording Long press--Record voice or cancel recording
	Decrease	Setting mode: Short press -- Decrease value Long press -- Decrease the value quickly
	Manual Feeding	Standby: Short press -- Manual feeding
	Increase	Setting mode: Short press -- Increase value Long press -- Increase the value quickly
 	Reset	Hold both for 6s at the same time to restore the factory settings.
 	Lock/Unlock	Hold both for 2s at the same time to lock/unlock. * All buttons will be locked automatically after 90s without operating.
 	Hour Format switch	Hold both for 5s at the same time to switch between 12-hour format and 24-hour format.

Icon Quick Guide

 
 



Icon	Meaning
12:00	Current Time/Feeding Time. Initial setting time is 12:00.
SF 00	Slow feeding mode. The interval time per portion can be set from 0-10 min.
F - 00	Set the portion of each meal. Up to 50 portions.
1 2 3 4 5 6	Number of meals Feeding: The digit is always on No Feeding: The digit is not display
	Light up when all button are locked.
	Connect the external power will light on.
	Flashing: No batteries Solid: Batteries installed Red Light Flashing: Low battery

* If powered by adaptor, the display screen will always be on.
If it is powered by batteries only without operation for 2 minutes, the display screen will turn off, and touch any button the display will turn on.

Quick Setting Guide

 

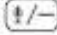 
1. **Ensure the feeder is unlocked** -- If the  is light up, press and hold   until you hear two beep to unlock the feeder.

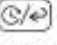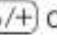2. Set Current Time

Long press  until the hour digits start flashing. Press  or  to set the correct hour and then short press  to save.
Repeat to set the minute. Long press  to exit setting.



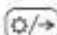 



3. Set Slow Feed Time

Long press  enter feeding parameters setting. Press  or  to set the interval time per portion, can be set up to 10 min.



4. Set Meal Time and Portion

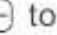- Short press  to next step, the digit "1" starts flashing. Short press  enter first meal setting. Short press  or  to set feeding time.




- Once feeding time is set and saved, the feeder will switch to portion mode. The screen will display "F-XX"

For example: Meal Time: 6:00 AM Feed Portion: 3 portions



 
F-00	No Feeding/Cancel Feeding
F-01	1 portion, about 1/10 cup
F-02	2 portions, about 2/10 cup
F-03	3 portions, about 3/10 cup
F-04	4 portions, about 4/10 cup
...	...
F-50	50 portions, about 5 cups

5. Set Other Meals

Repeat for meals 2 through 6. Long press  to save once you set all meals.

Voice recording and playback


- **Start recording**

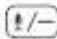
In standby, press and hold  until you hear a "beep" and continue to hold while recording up to 10 seconds. Release the button when you hear a "beep" to finish.

- **Play the recording**

In standby, press  to hear the recorded message.

- **Cancel recording**

In standby, long press  until you hear a "beep" sound and release immediately to cancel the recording.

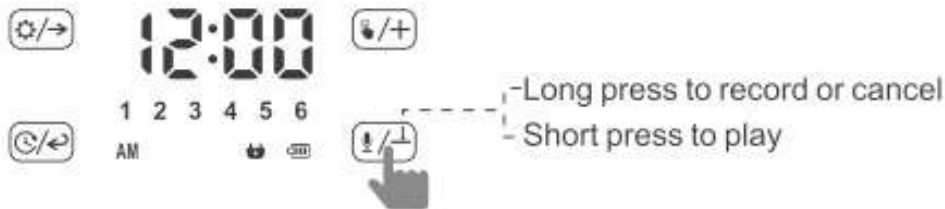


How to Clean



- (1) Remove two food bowls and the bowl holder.
- (2) Take out the desiccant and empty the grain in the hopper.
- (3) Counterclockwise rotate the hopper to separate the hopper from the base.

 

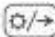 

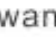 
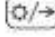 


The base unit cannot be submerged in water.

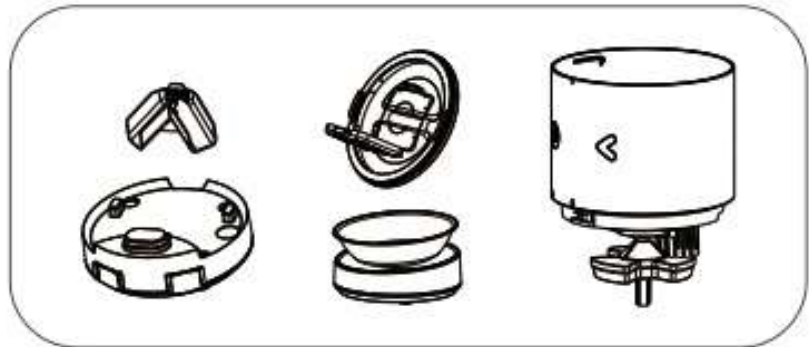

Food bowl, bowl holder, lip and food tank can be washable.

Troubleshooting

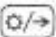Question	Solution
The screen shows E-01	E-01 appears on the screen to indicate that the food outlet is blocked. Please clean the food outlet in time.
The screen shows E-02	E-02 appears on the screen to indicate abnormal feeding of the feeder. Please check whether there are foreign objects in the hopper or the food is too large.
Press the button but doesn't work	Press and hold   for 2s to unlock the feeder.
How to cancel a meal	Change the feeding portion to F-00, the number of this meal will not be shown on the screen.
How to change a meal pre-set	In unlocked status, long press  enter meal setting, skip slow food setting. When digit "1" starts flashing, press  or  to choose the number of meal you want to change. Long press  to save setting.

LED screen is off	If powered by batteries only, the display screen will turn off, and touch any button the display will turn on.
The food amount is not the same as the set	The food amount per portion varies according to the size of the food, please test the food amount per portion several times manually before setting.

Warranty

Molypet offered **ONE YEAR WARRANTY** for F02D, please email our support team via support@molypet.com. If you have any issues, and attach your order ID in your mail. We will get back to you in 24 hours.